# SIERRA RAILROAD COMPANY



## EMPLOYEES' TIME TABLE

# 52

## IN EFFECT SUNDAY, OCTOBER 15, 1939, AT 12:01 A.M.

(Superseding Time Table No. 51 dated MARCH 28, 1937, and all Supplements thereto.)

PACIFIC STANDARD TIME

For the government and information of Employees only, and not intended for the use of the public.

The Company reserves the right to vary from this Time Table as circumstances may require.

J. E. TAYLOR, General Manager.

JAMESTOWN, CALIF.

J. J. FOWLER, Trainmaster.

## SIERRA RAILROAD COMPANY

WEST BOUND							TIME TABLE No. 52	EAST BOUND							
			FIF	RST CLASS		1gs	l vi trani Ai	TIME TABLE NO. 32			FIRST CLASS			<u> </u>	
				Leave Daily Ex. Sundays and Holidays	Telegraph Calls	Capacity of Sidings "Cars"	Distance from Tuolumne	OCTOBER 15, 1939	istance from akdale	Station Number	4				
									02	Arrive Daily Ex. Sundays and Holidays					
	nisan			11.05 AM	SR	YARD	0	DP TUOLUMNE WY	57.43	57	10.35 AM	Ma		A.	
	MARK			11.15		10	2.71	P RALPH -1.14	54.72	55	10.25				
	A STANIA	CARRANA		11.20	1.	10	3,85	P BLACK OAK 3.58	53.58	54	10.20				NOVO INN
	13 mg	MARCO.	2.2.2	11.33		8	7.43	9.50 P STANDARD 	50.00	50	10.07	N.			SELVOLVE
11124		1833.95	g sa a	11.37		45	8.20	P FASSLER 3.97	49.23	49	10.03	AN .			
	les est			\$12.00	RA	40	12.17	DP SONORA	45,26	45	s 9.50				
		America (	l'Alexania Table			12	12.81	LIME SPUR3.47	44.62	44					NO ARREST
distriction.	Services		SAN.	s12.30	DS	YARD	16.28	DP JAMESTOWN WOT	41.15	41	s 9.25	Ŋ.	dagagA	23325	
	Estata	MENERA.		12.49		60	22.36	6.08 P CHINESE -1.00	35.07	35	8.55	XI, s			
	S. Parasa	in the second	135	an starry		20	23,36	QUINN SPUR W	34.07	34					
illi sasa.	asince and		2.3	12.59		25	25.43	P JACK'S SIDING	32.00	32	8.44	Asia.		No talija.	
**************************************	Single	1000m	1,211			A 3.:	28.39	2.96 KEYSTONE 3.04	29.04	29					
			Ŋ.	1.18		37	31.43	P HETCH HETCHY JUNCTION	26.00	26	8.25				
	E VITTO VE	Lange		1.30		15	34.63	P CANYON TANK	22.80	23	8.13		ENERGY.		
	Leave vi			1.43		80	38.43	P COOPERSTOWN WOY	19.00	19	8.00	and the same	ese animidente censo		
				1.51		16	41.53	P WARNERVILLE W	15.90	16	7.52				
	. Na san	Services		2.03		21	46.83	P PAULSELL	10.60	11	7.40				Labagas E
				2.14		26	51.33	- 4.50 P ARNOLD	6.10	6	7.30				MANA
		Tenedar.		kije a ze začejska	Delate		55.93		1.50						
way (C)	AMA			Near All		YARD	56.93	P SANTA FE JUNCTION Y	0.50	1					ASSAS AS
eren A					O A			DP OAKDALE (S. F. Depot)							
	The same			2.30 PM	ВU	YARD	57.43	DP OAKDALE (S. P. Depot) W	0	0	7.15 AM		grade to the		enes:
				Arrive Daily Ex. Sundays and Holidays							Leave Daily Ex. Sundays and Holidays				

East-bound trains are superior to west-bound trains of the same or inferior class. See Rule 32.

See Rule 108.—In all cases of doubt or uncertainty the safe course must be taken and no risks run.

#### SIGNS AND CHARACTERS

The following signs indicate: | D Day telegraph station. s Regular stop.

Lv Leave.

P Telephone.
W Water station.

O Oil.

T Turntable.

Y Wye.

Ar Arrive.

### SPECIAL RULES

All train movements will be governed by the Sierra Railroad Company rules and regulations. Every employee whose duties are in any way prescribed thereby will provide himself with a copy of these rules and must be familiar therewith.

- 1. Registering Stations: Oakdale, Jamestown and Tuolumne.
  - 2. See Rule 45. Yard Limits are defined as follows:

At Oakdale—From Southern Pacific station to 1,000 feet east of Atlas.

At Atlas—From 1,000 feet east on Sierra Railroad, main line, west to gravel bunkers on Gravel Pit Spur.

At Cooperstown—From 1,000 feet east of east switch to 1,000 feet west of west switch.

At Hetch Hetchy Junction—From 5,200 feet east of mile post 26 to 1,000 feet west of west switch.

At Jacks Siding—From 500 feet east of east switch to 1,000 feet west of west switch.

At Chinese—From 1,000 feet east of east switch to 1,000 feet west of oil spur switch.

At Jamestown—From 1,000 feet east of east switch on the main line, and to Shell Oil Spur to 500 feet west of Mile Post 40.

At Sonora—From mile post 46 to 500 feet west of west switch at Lime Spur.

At Standard—From 1,000 feet east of east switch at Standard to 1,000 feet west of west switch at Fassler.

At Tuolumne—From east end of track to 1,000 feet west of west switch at Ralph.

- 3. All trains will approach yard limits of stations shown with train under full control, expecting to find the main track obstructed. This does not give switching engines right over any train.
- 4. All trains must get a clearance card before leaving terminals and at Jamestown.

5. SPEED RESTRICTIONS—Maximum speed of any train at any point must not exceed 35 miles per hour. All trains will reduce speed to 12 miles per hour when using crossovers or turnouts.

Light engines will not exceed 20 miles per hour, and when running backward 15 miles per hour.

With the exceptions noted above, trains must not exceed the speed in miles per hour as shown below:

Mixed

		and Log
	Passe	enger Freight Trains
Betw	veen Oakdale and Cooperstown	35 30
"	Cooperstown and Jamestown	30 20
"	Ismartown and Tuolumna	99 90 10

All trains will consume not less than four (4) minutes between Standard and Fassler.

6. Trainmen must watch closely to see that wheels are not sliding and will immediately signal engineer to stop if wheels are found sliding.

Each brakeman will be held responsible for any wheels slid flat under the part of train under his charge.

- 7. On all grades, when switching, cutting off, picking up cars or detaching engine from cars, or coupling to cars on descending grades, all handbrakes must be set and wheels of all cars properly chocked to prevent accident.
- 8. All concerned are cautioned to keep a constant lookout for overhead and side obstructions and for derailing switches.
- 9. Air hose must be disconnected by hand and not pulled apart.

- 10. Flying or running switches are prohibited.
- 11. No engine must be detached from its train on a grade until all handbrakes have been set and the wheels safely chocked. No engine must attempt to couple to cars on a down grade unless all handbrakes are set and wheels well chocked. Conductors and Engineers will be held responsible for violation of this rule.
- 12. Enginemen are required to carefully watch the netting of the stacks of their engines and see that they are in good condition.
- 13. Turntable track at Jamestown must not be left blocked.
- 14. Repair tracks are intended for cars in bad order and should not be used for other cars.
- 15. Engineers must not place their engines in Round House or vacate them at end of runs until fully supplied with oil, sand and water.
- 16. Agents, Conductors, Brakemen, Engineers, Firemen Track and Bridge Foremen must have their watches inspected quarterly and certificates filed with the Trainmaster.
- 17. The catch on all Turntables must not be used to stop table; wait until table is stopped before throwing catch.
- 19. Extra trains may run ahead of first class trains.

